SONY

2-349-512-11(1)





Playing Game 2 ("Repeat Me")

Not only did you get the AIBO® Entertainment Robot, but you are going to be one of the first to experience the latest AIBO Game!

From the makers of AIBO Dancer comes "Repeat Me!".

You might ask, "Where can I play this fabulous game?" Well, look no further than your AIBO robot... it's already installed!

So, repeat after me: "I love the makers of AIBO!".



How to play

Repeat Me is a simple memory game. Before the game starts, you can press the AIBO® Entertainment Robot's paws to hear the different sounds that each one makes.

To hear the instructions, say "Instructions" or touch the AIBO robot's head sensor.

1 Simultaneously touch the AIBO robot's front and rear back sensors for 3 seconds, or show it the "Game Mode 2 (M)" card.

When you show the AIBO robot the "Game Mode 2 (M)" card, it starts playing the game immediately.

- 2 Touch the front (blue) back sensor.
- 3 Touch the middle (orange) back sensor.
- 4 Say "Let's go!" or touch the AIBO robot's back sensor.

The AIBO robot will first play back one sound. You then have three seconds to duplicate the sound. Watch the AIBO robot's Illume-Face to see a hint for which paw to press. The AIBO robot will continue to add more sounds together for you to reproduce.

The game will continue until you get the sequence wrong, or unil you complete all 16 levels of Repeat Me.

Voice Commands:

"Let's go!"
"Instructions"
"High score"
"Reset high score"

Repeat Me can be played while the AIBO[®] Entertainment Robot is on the energy station. However, before starting the game, move the AIBO robot's rear legs so that you can press the paw sensors.

Press the AIBO robot's head sensor for three seconds to return to Autonomous mode.